A product of

LEONHARD CONSULTING GmbH SCHWEIZ SUISSE SWITZERLAND

SIPROT® The modern PROTOCOL MANAGEMENT SYSTEM **Exchange MUTE button / cover**

MICROPHON with MUTE-Button MUTE function can be operated

SIPROT


LEONHARD

The MUTE-FUNCTION See E MICROPHON MUTE-connection details backside

Exchange instruction MUTE-button / cover



For exchange Vaccuum gripper

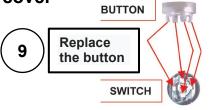

MUTE function can not be operated

MICROPHON with cover















- 1 Microphon with mute function
- 2 Suction cup tool provide Important: moisten the suction cup
- 3 Place the moistened suction cup tool on the button And press until the sucker stops at the button
- 4 Pull out the button with the suction cup tool
- 5 Store the suction cup tool and key button, (do not throw it away, it will be needed again if microphone needs to be converted again)

- 6 Place the key cover on the open hole
- 7 Press the key cover into the hole by hand, it has to lock in easily, there are 3 buttons cover with each microphon Green dot for holes with tolerance smaller Black for standard holes Red dots for holes with tolerance higher
- 8 The MUTE function of the microphon is OFF

To the MUTE function:

Take a fine knife ant lift the cover lightly be careful not to damage the cover of the unit. Now you can take the cover off.

Replace the butto on the switch housing, do not force! Please note the following: the butten has 4 small protruding legs. These must be placed in the existing holes in the switch housing recesses. All 4 legs are the same. «see 9, drawing refitting button»